# AZIZ LIGHT™ 160 LUMINAIRE





The Coolon AZIZ LIGHT<sup>™</sup> may come with a number of mounting options depending on order requirements.

### **OPTION 1 - HOOK MOUNT**

Suitable for application where the luminaire is suspended and is not likely to be swayed by the wind. This option is preferred in warehouse applications where lights may come in contact with a pallet during load racking.



# **OPTION 2 - T-BOLT SWIVEL BRACKET**

Suitable for application where the luminaire is likely to be swayed by the wind. This option allows for fast and secure installation of luminaires on slanted roofs and ensures lights do not sway in the wind. Care should be taken when installing the light to allow sufficient clearance of any elevated loads or moving structures due to the rigid mounting bracket.



# **ATTENTION**

Customers must select an appropriate method and material for the mounting of luminaires/ equipment.

Avoid mixing materials which may lead to premature equipment failure or insecure mounting due to corrosion or accelerated wear and tear.

Account for environmental factors such as temperature, wind, vibration, shock, impact, etc. when identifying appropriate mounting.

#### Optical surface obstructions:

Excessive and prolonged obstruction of the optical surface may result in associated damage which is not covered by warranty.



#### Secondary fall arrest:

Lanyard to be looped between driver and luminaire body. Luminaire drop height is not to exceed 300mm. Fall arrest lanyard must be able to withstand a drop load of 10kg min.



A periodic inspection and maintenance plan should be established in accordance with environmental and other relevant factors affecting the long term luminaire/equipment operation and secure mounting.

### INSTALLATION INSTRUCTIONS

### **OPTION 1 - HOOK MOUNT**

# Step 1

Apply LOCTITE® to eye bolt thread. LOCTITE® 277 is recommended for a permanent bond. Tighten eye bolt to driver. Hook the AZIZ LIGHT™ to chain\* and connect the cable.

Units not equipped with a plug must have the wires connected securely.



COOLON www.coolon.com.au support@coolon.com.au • aus. 1300 287 533 • intl. +613 8681 3633 • www.coolon.com.au

As a matter of continual improvement, the requirements and recommendations in our manuals evolve to reflect new industry requirements and the latest feedback from the field. The Codoin team is working hard to ensure optimal product operation and the safety of all users, please chour website periodically to ensure you are up to date with the latest information. Product must be installed by a suited by qualified person. All documentation is subject to change without notice.

# INSTALLATION INSTRUCTIONS

### **OPTION 2 - T-BOLT SWIVEL BRACKET**

# NOTE

The T-Bolt Swivel Bracket allows the AZIZ LIGHT™ high bay luminaire to be installed on angled surfaces between 0 and 45°. Luminaire should remain perpendicular to the ground.

### Step 1

Secure bracket base to mounting surface (bolts not supplied).



### Step 3

Loop lanyard cable under the driver and secure to carabiner on the opposite side.



## Step 5



# IMPORTANT

Primary use: commercial and industrial applications.

- Read through this manual before installation

- Handle the product with care
  Class I products must be grounded
  The product must be installed by a suitably qualified person Do not stare at operating lamp, may be harmful to the eyes
- Make sure the product is securely installed
  The housing might become hot after operation
  Keep optical face clean

Turn OFF the power before installation and maintenance





support@coolon.com.au • aus. 1300 287 533 • intl. +613 8681 3633 • www.coolon.com.au

As a matter of continual improvement, the requirements and recommendations in our manuals evolve to reflect new industry requirements and the latest feedback from the field. The Coolion team is working hard to ensure optimal product operation and the safety of all users, please check our website periodically to ensure you are up to date with the latest information. Product must be installed by a suitably qualified person. All documentation is subject to change without notice.



# Step 2

Thread the driver of the AZIZ LIGHT™ to the T-Bolt assembly.



# Step 4

Tighten nut to fasten T-Bolt to driver.



# Step 6

Connect the power cable. Units not equipped with a plug must have the wires connected securely.

