


INSTALLATION INSTRUCTIONS


Step 1

Remove the old fitting from the pole leaving the existing cable.

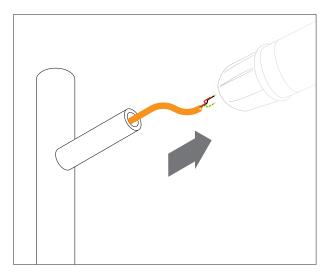

Step 3


Feed the cable through the cable gland while sliding the DLK2 to the spigot. Secure using U-Bolts with washers and M8 tube nuts.

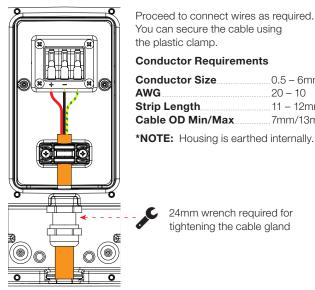


Conductor Size	0.5 – 6mm ²
AWG	
Strip Length	11 – 12mm
Cable OD Min/Max	

Step 2

Loosen the six captive screws on the bottom of the DLK2 to remove cover.

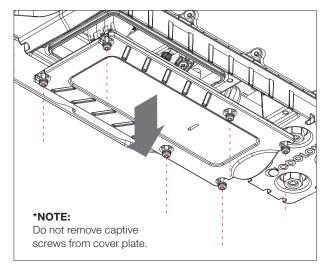

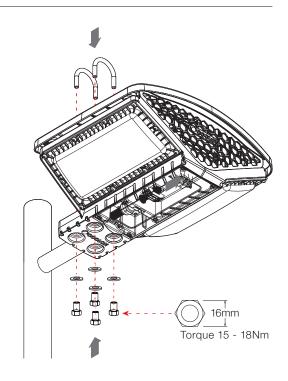




support@coolon.com.au • aus. 1300 287 533 • intl. +613 8681 3633 • www.coolon.com.au As a matter of continual improvement, the requirements and recommendations in our manuals evolve to reflect new industry requirements and the latest feedback from the field. The Coolon team is working hard to ensure optimal product operation and the safety of all users, please check our website periodically to ensure you are up to date with the latest information. Product must be installed by a suitably qualified person. All documentation is subject to change without notice.

INSTALLATION INSTRUCTIONS (Continued)

Step 4


After mounting DLK2 to the spigot and wiring is complete, refit the bottom cover to finish installation.

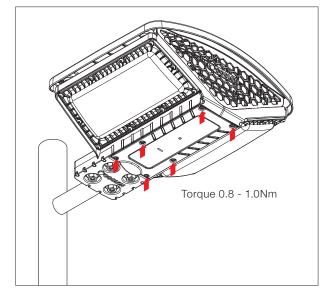

GLAND REPLACEMENT

The fitting is supplied with a stainless steel M20 gland to suit cable outer diameter 7 – 13mm. Cable glands are secured using Loctite 222.

The cable gland can be replaced by other types of glands which have a M20 x 1.5mm mounting thread. We recommend Loctite 277 for a permanent bond.

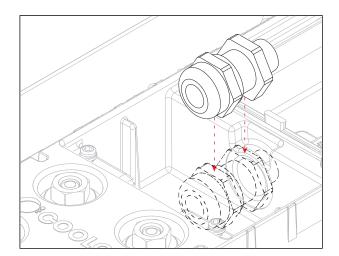

IMPORTANT

Primary use: commercial and industrial applications.

Read through this manual before installation

Handle the product with care
Class I products must be grounded
The product must be installed by a suitably qualified person

• Do not stare at operating lamp, may be harmful to the eyes

Make sure the product is securely installed
The housing might become hot after operation
Keep optical face clean

Turn OFF the power before installation and maintenance





support@coolon.com.au • aus. 1300 287 533 • intl. +613 8681 3633 • www.coolon.com.au As a matter of continual improvement, the requirements and recommendations in our manuals evolve to reflect new industry requirements and the latest feedback from the field. The Coolon team is working hard to ensure optimal product operation and the safety of all users, please check our website periodically to ensure you are up to date with the latest information. Product must be installed by a suitably qualified person. All documentation is subject to change without notice. Page 2 / 2