
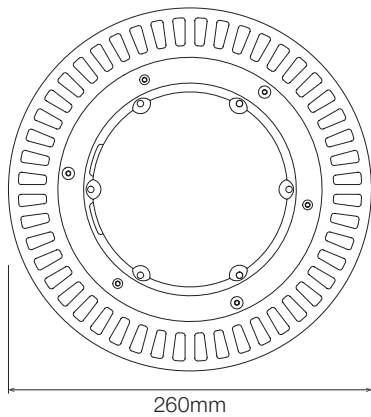



AZIZ LIGHT™ 160 LUMINAIRE

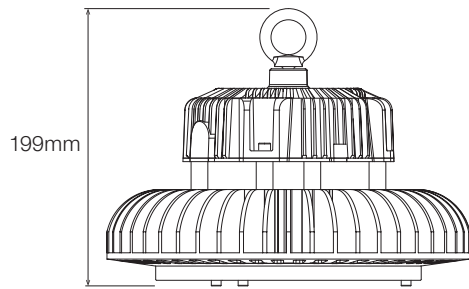

The Coolon AZIZ LIGHT™ may come with a number of mounting options depending on order requirements


OPTION 1 - HOOK MOUNT

Suitable for application where the luminaire is suspended and is not likely to be swayed by the wind. This option is preferred in warehouse applications where lights may come in contact with a pallet during load racking.

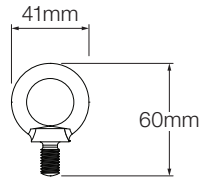

OPTION 2 - T-BOLT SWIVEL BRACKET

Suitable for application where the luminaire is likely to be swayed by the wind. This option allows for fast and secure installation of luminaires on slanted roofs and ensures lights do not sway in the wind. Care should be taken when installing the light to allow sufficient clearance of any elevated loads or moving structures due to the rigid mounting bracket.

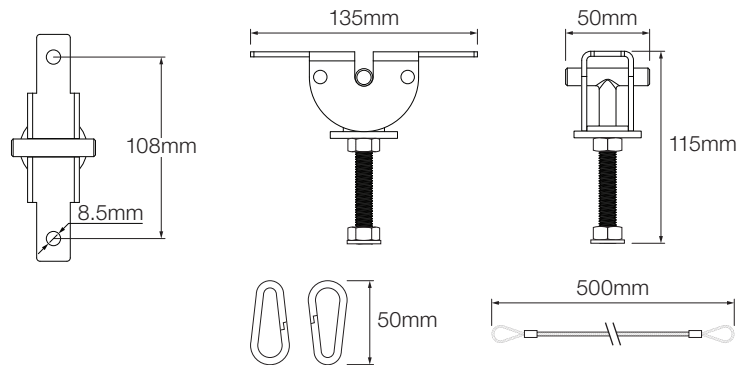


⚠ ATTENTION:

Unit must not be operated with the optical face blocked or obstructed.

The AZIZ LIGHT™ has a high intensity light output designed for warehouse applications and other clean environments. It is of critical importance that the polycarbonate optical face of the luminaire is regularly cleaned to maintain optimal performance.

Failure to keep the optical face clean may result in decreased light output and luminaire damage. Any damage sustained by the luminaire as a result of a dirty or blocked optical face is not covered under warranty.

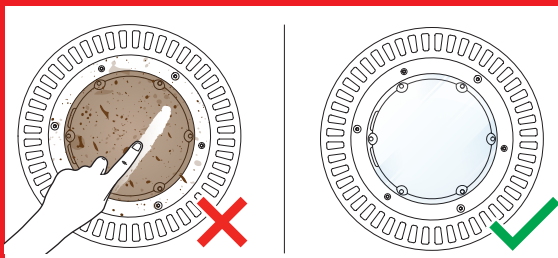


INSTALLATION INSTRUCTIONS

OPTION 1 - HOOK MOUNT

Step 1

Apply LOCTITE® to eye bolt thread. LOCTITE® 277 is recommended for a permanent bond. Tighten eye bolt to driver. Hook the AZIZ LIGHT™ to chain* and connect the cable.

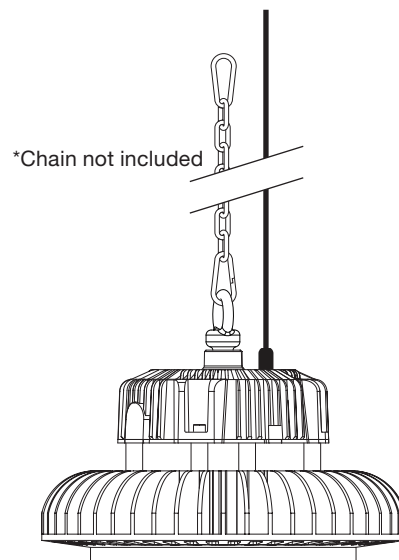


INSTALLATION INSTRUCTIONS

OPTION 2 - T-BOLT SWIVEL BRACKET


Step 1

Secure bracket base to mounting surface (bolts not supplied).

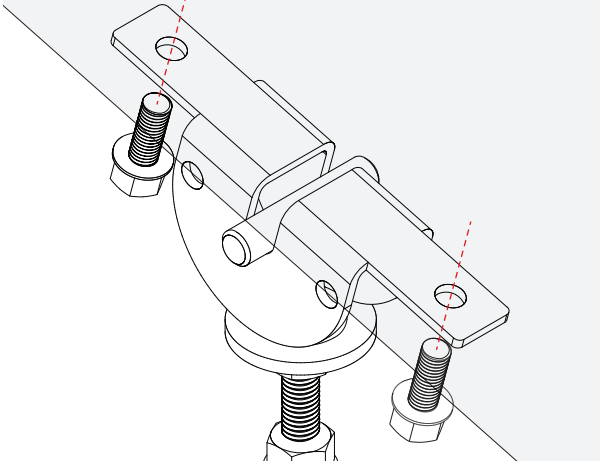


Step 3

Loop lanyard cable under the driver and secure to carabiner on the opposite side.

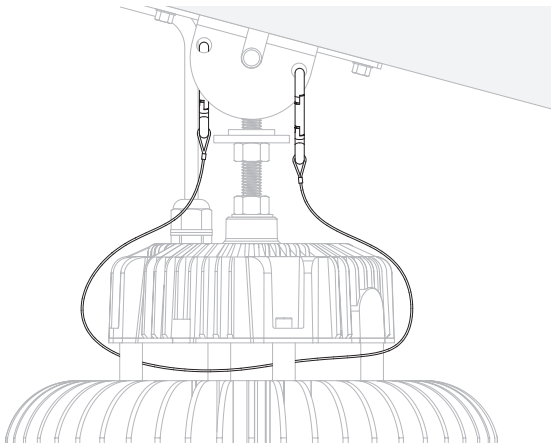


Step 5

Tighten upper nut to restrain unit from moving.

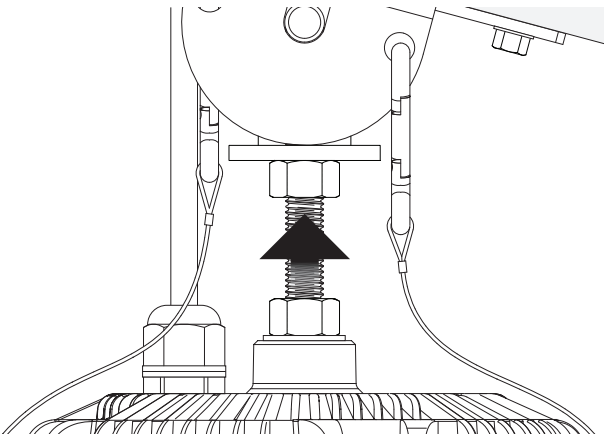


Step 2

Thread the driver of the AZIZ LIGHT™ to the T-Bolt assembly.

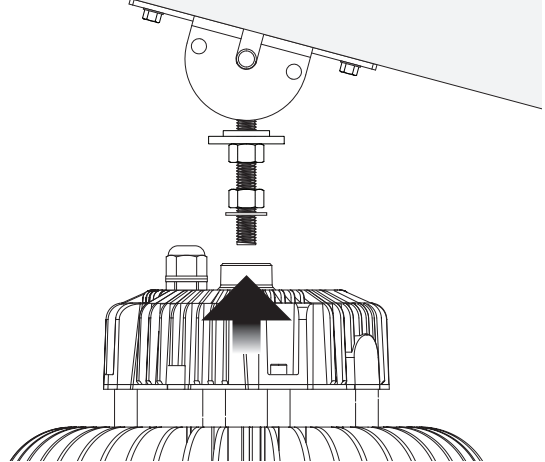

Step 4

Tighten nut to fasten T-Bolt to driver.

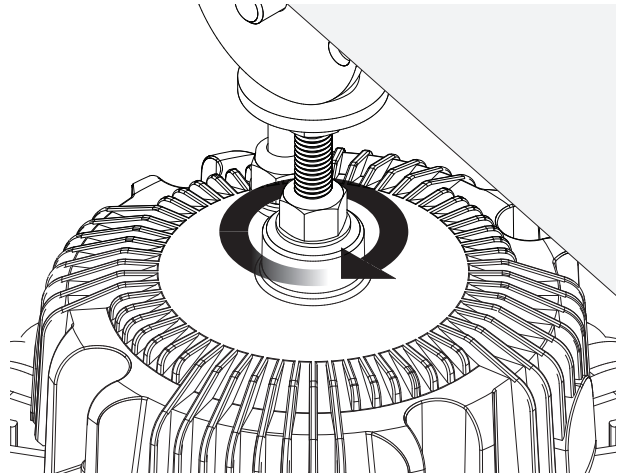

Step 6

Connect the power cable.

