


INSTALLATION INSTRUCTIONS


Step 1

Remove the old fitting from the pole leaving the existing cable.

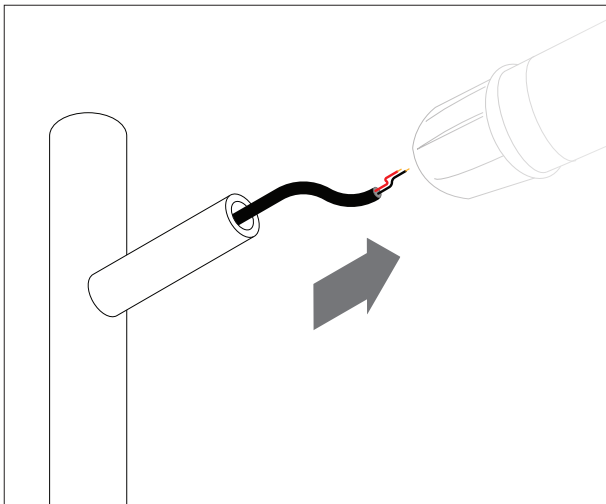



Step 2

Loosen the six captive screws on the bottom of the DLK2 to remove cover.

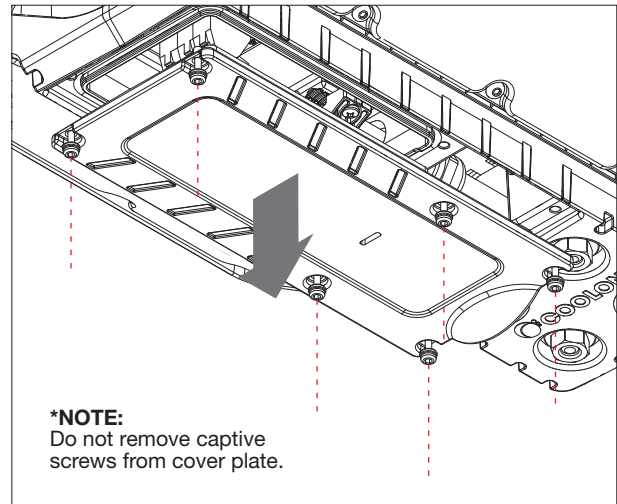

Step 3


Feed the cable through the cable gland while sliding the DLK2 to the spigot. Secure using U-Bolts with washers and Nylock nuts.

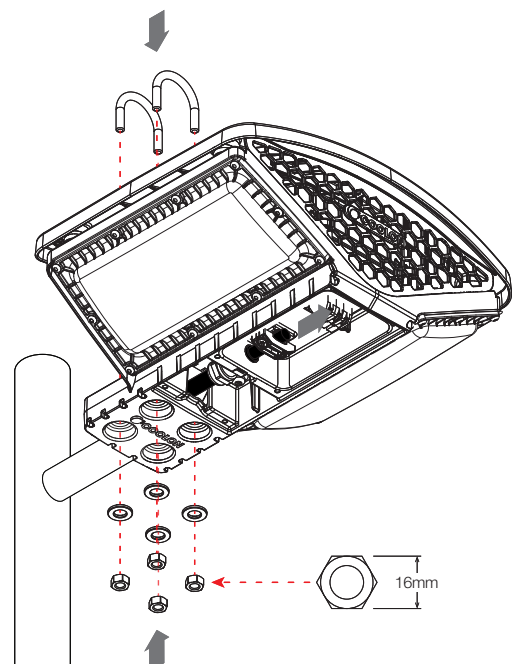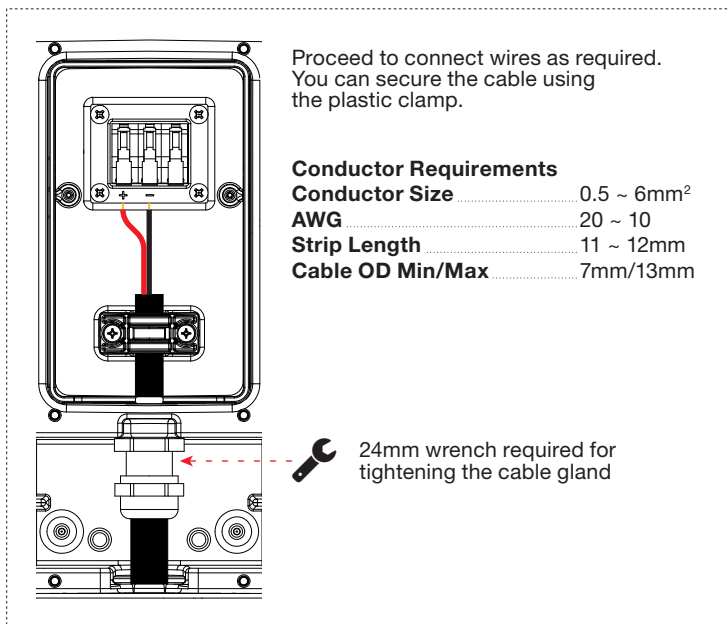

INSTALLATION INSTRUCTIONS (Continued)

Step 4

After mounting DLK2 to the spigot and wiring is complete, refit the bottom cover to finish installation.

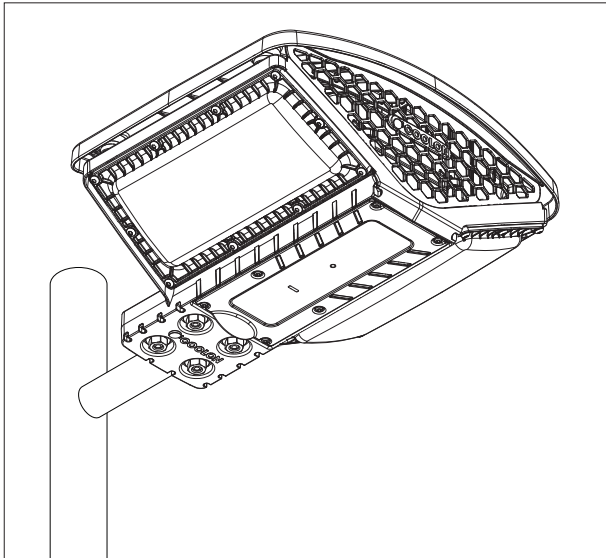

GLAND REPLACEMENT

The fitting is supplied with a stainless steel M20 gland to suit cable outer diameter 7 ~ 13mm. Cable glands are secured using Loctite 222.

The cable gland can be replaced by other types of glands which have a M20 x 1.5mm mounting thread. We recommend Loctite 277 for a permanent bond.

