


# MOUNTING BRACKET INSTALLATION


### Step 1

Mount light fitting to appropriate location.

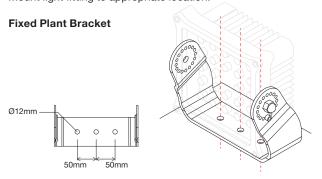


## Step 2

To adjust the mounting angle, unscrew bolt and loosen dome nut.

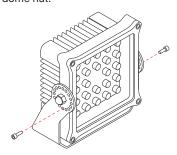


### Step 4

Use Loctite® 222™ retaining compound (not included) to secure the dome nut. Screw in and tighten bolts on both sides.

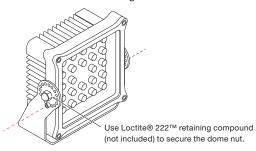


### **Mobile Plant Bracket**

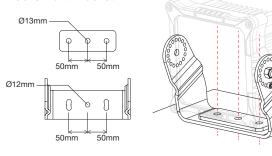

## Step 3

Adjust the angle of the light fitting, and line up bracket holes to either the top or bottom mounting holes.

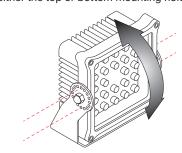

### WIRING INSTRUCTIONS

